


How to install an app on the xxBDL3452T.


Select the arrow key on the right or on the left (nbr 1)

Select home (nbr 2)

Select Apps (nbr3)

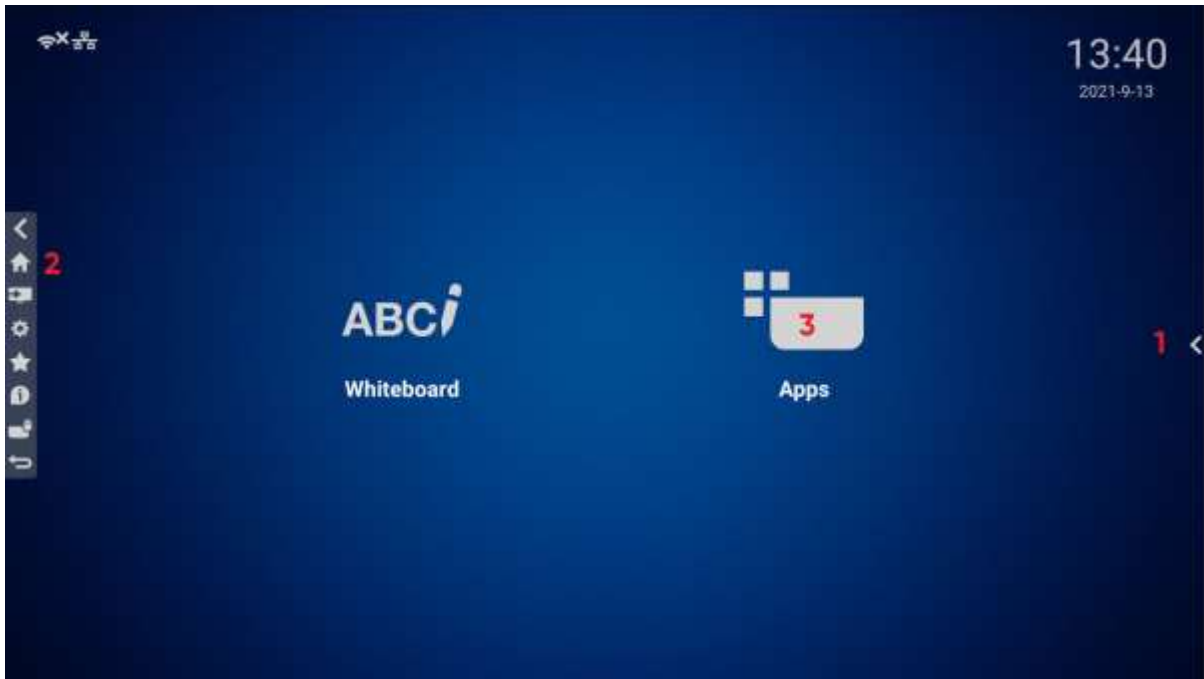


Select FileManager:

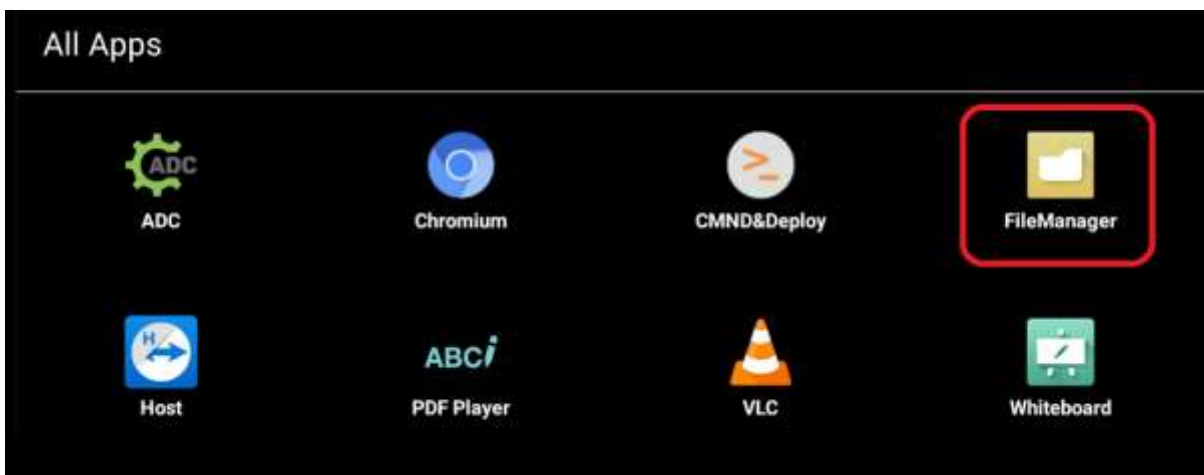

Select the USB device, select List (see red marker below).

Select your android apk file (your app), this will open the file.

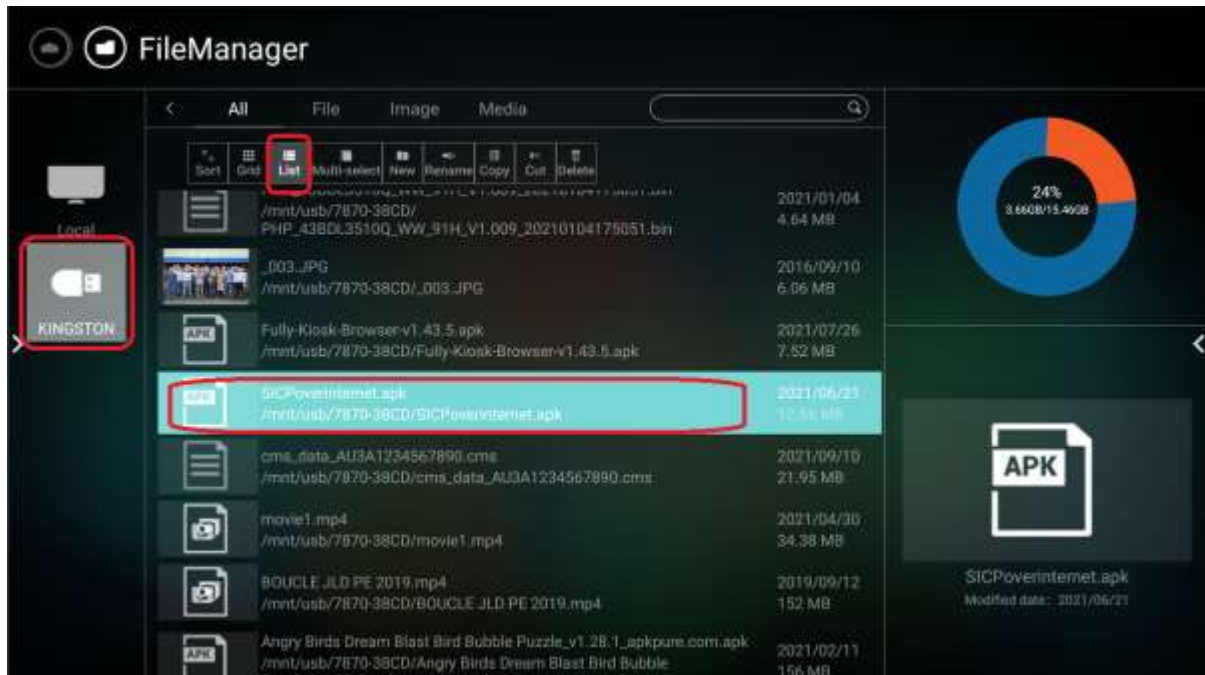


Select “install” and follow the instructions.




Once the app is installed you can can assign it as custom source.


Press the settings gear, select android settings, enter pasword (1234)

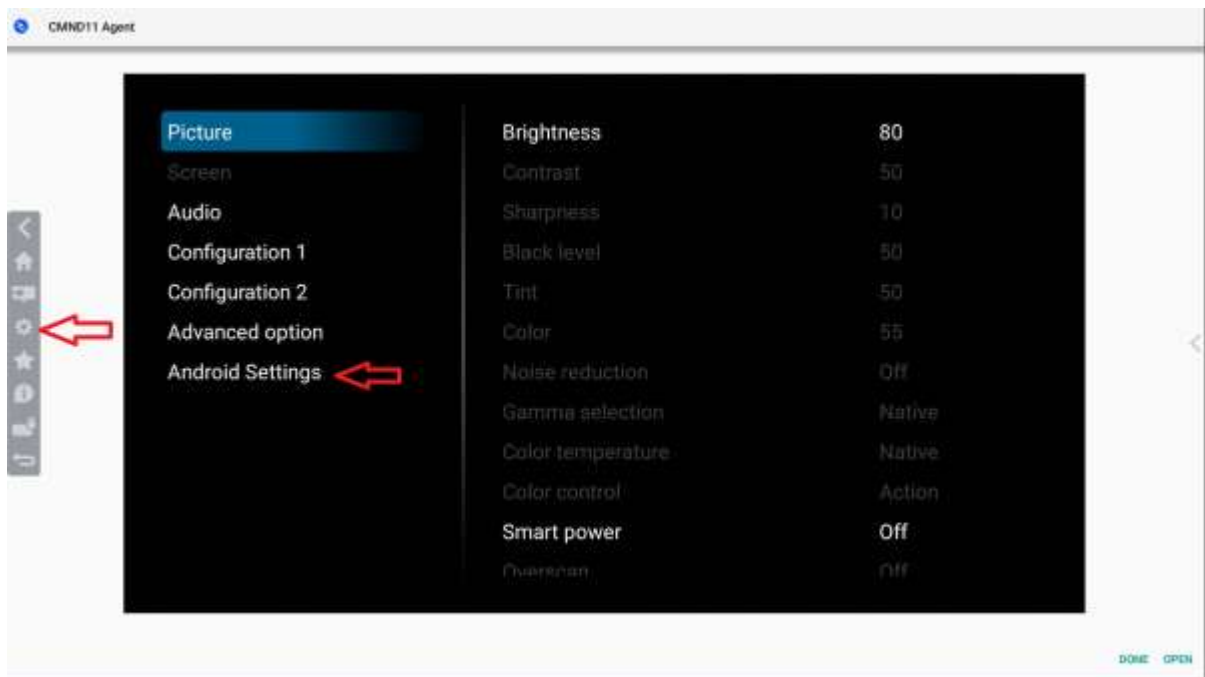


Select signage display

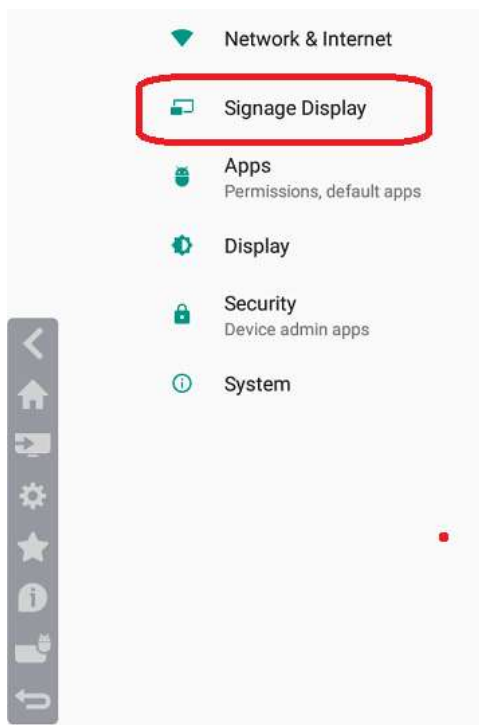


Select source settings

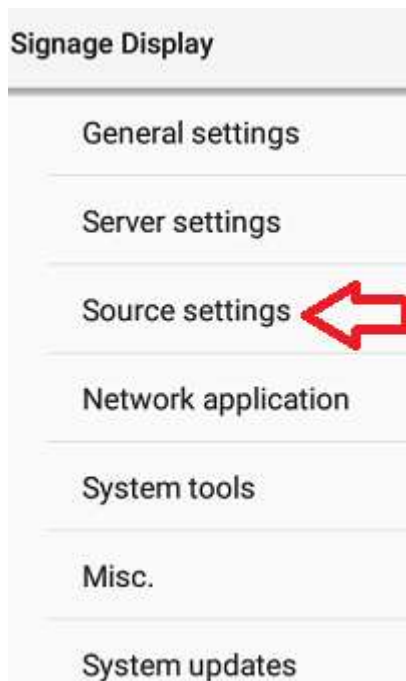


Select custom app

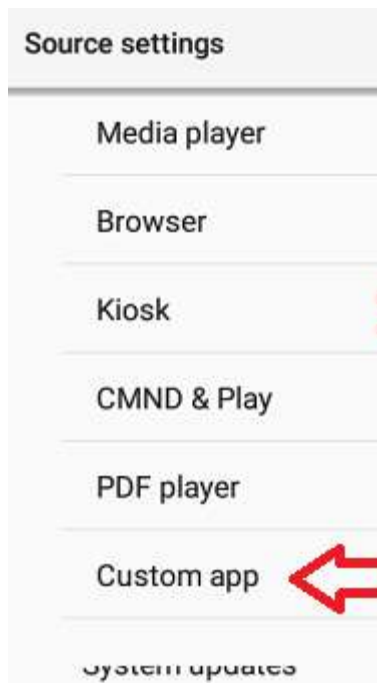


Flag the “Force restart custom app” and “select app”.

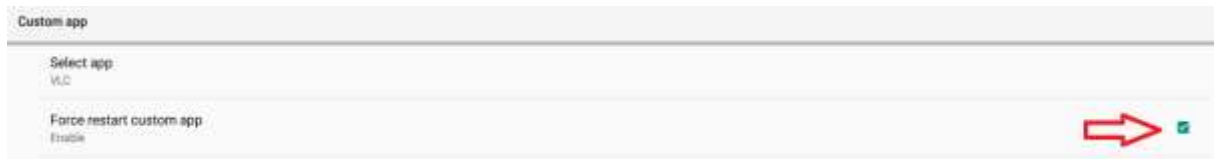

Select your installed app and save.

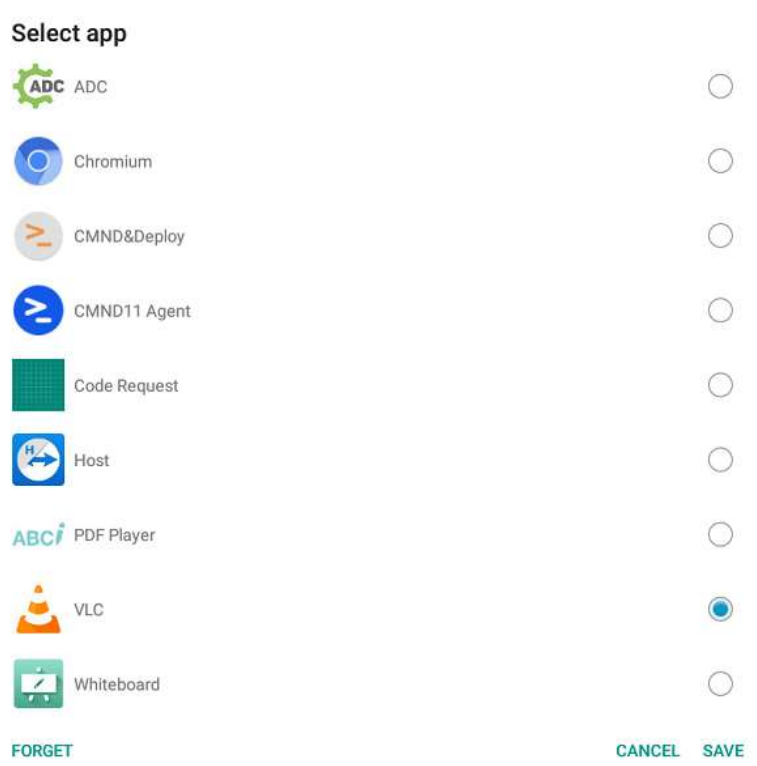

Set boot on source to your installed app, in this way the monitor will always start with the app.

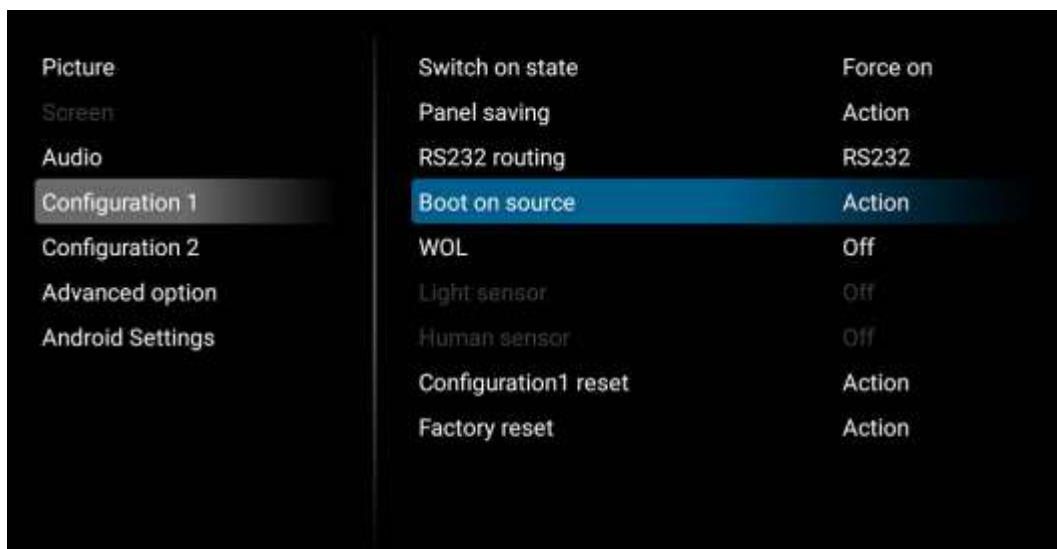

Set the input to "Custom"

And select "Save"

